


Vitodens 100-W, B1HE Models 85/120/150/199

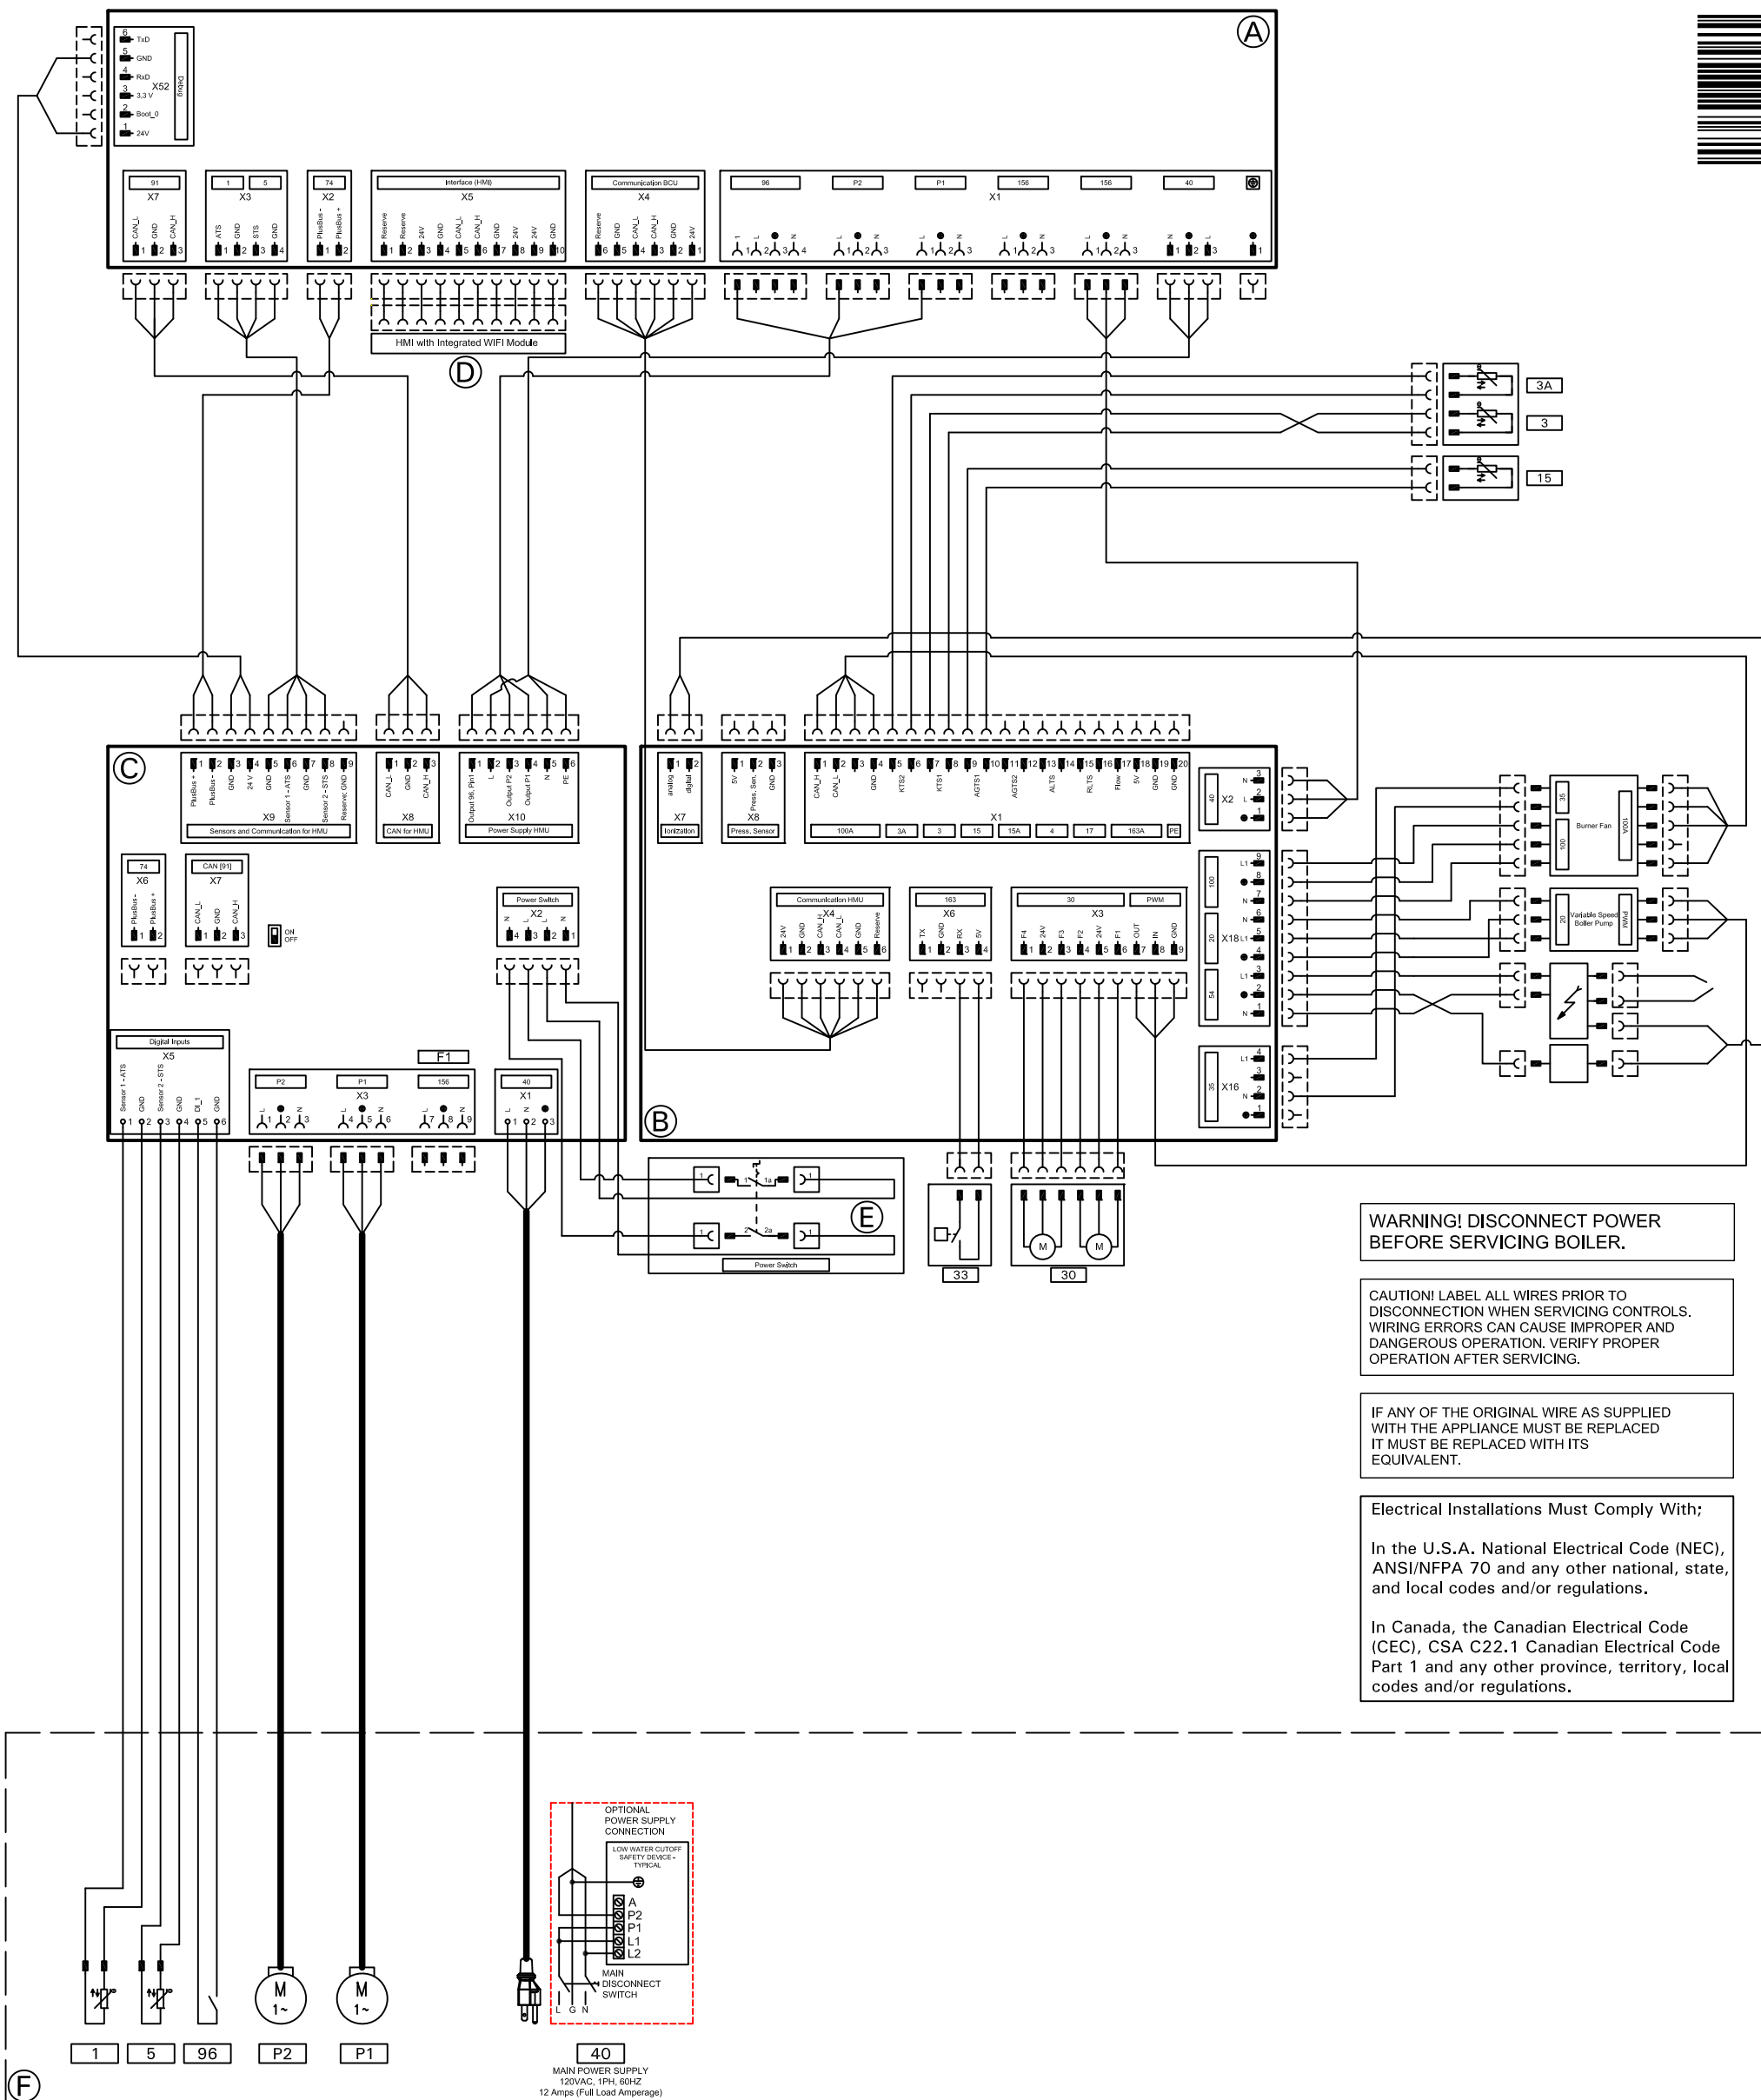

WARNING! DISCONNECT POWER BEFORE SERVICING BOILER.

CAUTION! LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRING ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.

IF ANY OF THE ORIGINAL WIRE AS SUPPLIED WITH THE APPLIANCE MUST BE REPLACED IT MUST BE REPLACED WITH ITS EQUIVALENT.

Electrical Installations Must Comply With;

In the U.S.A. National Electrical Code (NEC), ANSI/NFPA 70 and any other national, state, and local codes and/or regulations.

In Canada, the Canadian Electrical Code (CEC), CSA C22.1 Canadian Electrical Code Part 1 and any other province, territory, local codes and/or regulations.

- ①** HMU Control Board
- ②** BCU Control Board
- ③** WP Control Board
- ④** HMI With WIFI Module
- ⑤** Power Switch
- ⑥** Field Wiring Connections
- 1** Outdoor Temperature Sensor
- 3** Boiler Temperature Sensor 1
- 3A** Boiler Temperature Sensor 2
- 5** DHW Temperature Sensor/Dry Contact
- 11** Ionization Signal
- 15** Flue Gas Temperature Sensor
- 20** Variable Speed Boiler Pump (Internal)
- 30** Diverting Valve Stepper Motor
- 33** Boiler Flow Switch
- 35** Gas Valve
- 40** Power Supply
- 54** Ignition Transformer
- 96** Heat Demand Dry Contact

- 100** Burner Fan Motor Power Supply
- 100A** Burner Fan Motor Speed Control
- P1** DHW Pump/DHW Recirculation Pump
- P2** Heating Zone Pump
- PWM** Internal Pump Speed Control
- F1** Fuse, 6.3A (slow), 120V



Scan for digital copy of this document