


BLAZING
INSTALL FASTER.

BVS-2

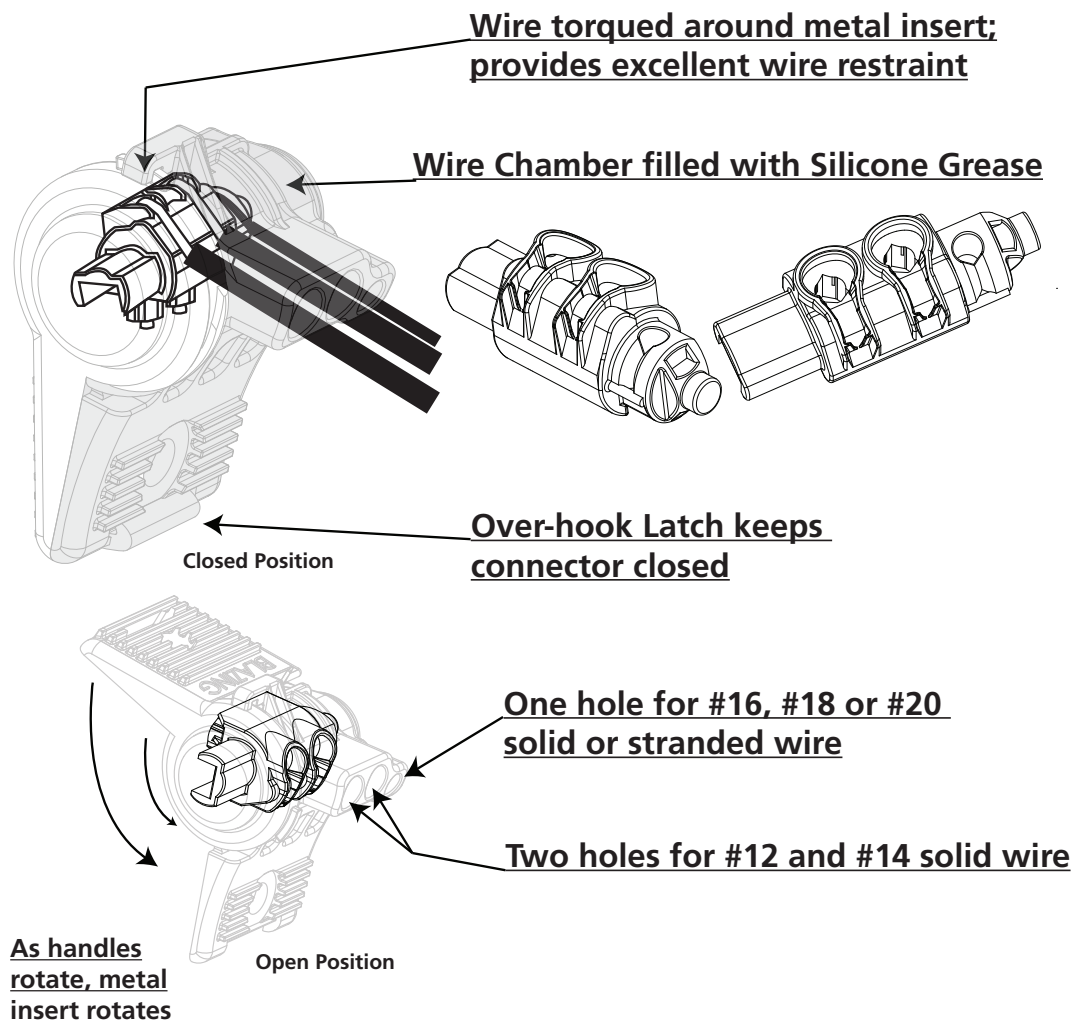

For Multiple #18 or #20 Wire Combinations:

Strip all wires to 5/8". Pre-twist stranded wires. Insert up to 3 solid or stranded #18 or #20 wires into each large hole and 1 #18 or #20 solid or stranded in the small hole. Hold wires in place while squeezing handles together until the latch snaps shut. Up to 7 wires total in connector.



Intertek


**2 #14 Sol, 1 #18 Str AWG CU
600 Volts Max, 105°C Max**

**Raintight, Watertight, Submersible
For Use in Damp & Wet Locations**

486D Direct Bury Listed

Installation Instructions

Always use caution, turn off power. Use on electrical circuits of 600 volts or less. Installation should always comply with local and national electrical codes.

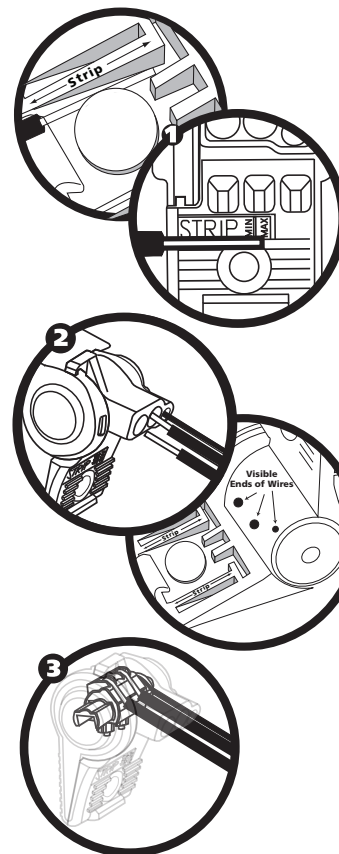

Step 1

Strip wires to 5/8". Use one of the strip guides molded into the connector for reference. Pre-twist stranded wires.

Step 2

Rotate handles fully apart beyond 90 degrees. Insert stripped wires into connector; #12-#14 in the large holes and #16-#20 in the small hole. Exposed ends of wires should be visible through the clear housing on the back.

Step 3

Hold wires in place while squeezing handles together until the latch snaps shut.

PACKAGING QTYS.

PART	PACKAGE	CARTON	MIN. ORDER
BVS-2	20	100	100