

KPS063A44

Be sure to read this manual before installing the product and follow all instructions in it. In addition, refer to the Installation Manual that came with the outdoor unit.

**Parts** Before assembling the product, verify that all of the following parts have been included:

Name	Side plate	Side plate	Top plate	Front plate	Screws	Piercing screw	Installation Manual
Illustration	① (Right)	② (Left)	③	④	⑤	⑥	⑦
Quantity	1	1	1	1	14	3	1 (this document)


**Caution** Read these safety considerations for installation carefully before installing the product.

- Be sure to observe the following installation precautions to ensure that the product can be used safely:
- 1. Install the product so that it is situated high enough to allow access to the outdoor unit for maintenance.
- 2. Installing the product in a location in which it may be exposed to strong winds, secure the outdoor unit with wire or other means.
- 3. Choose a location where the operating sound will not cause a nuisance to the neighbors of the user.
- 4. Tighten screws securely. Failure to do so may result in vibration.

**Caution . . .**  
Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

**Installing the snow hood (Intake rear plate)**


**1 Attach the side plate (right) ①.**

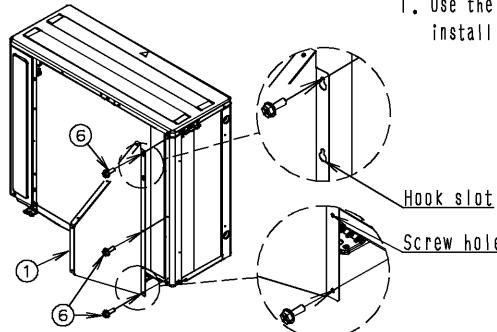

1. Use the 3 piercing screws ⑥ included in the kit to install the side plate (right) ①.


- For the hook slot, use the first hook slot from the top.
- For the screw hole, use the first screw hole from the bottom.
- Installation is easiest if you start with the hook slot.
- Align the screw installation position with the dowel hole.

**2 Attach the side plate (left) ②.**

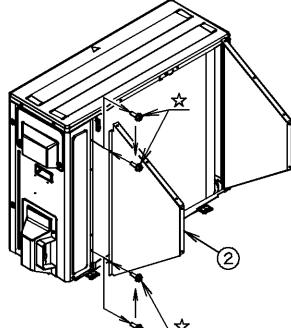


1. Remove the 2 screws (★) that hold the heat exchanger.
2. Install the side plate (left) ② using the 2 screws removed in step 1.

**3 Attach the front plate ④**

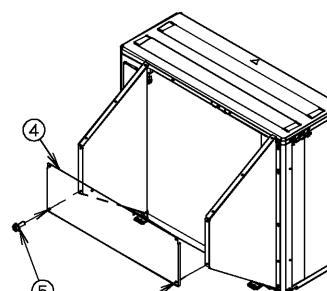


1. Temporarily secure the front plate ④ in place with the 2 screws ⑤ included in the kit.

**4 Attach the top plate ③**

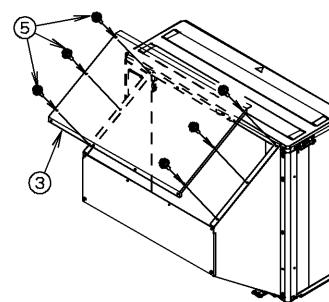

1. Temporarily secure the top plate ③ in place with the 6 screws ⑤ included in the kit.

**5 Attach the top plate ③**

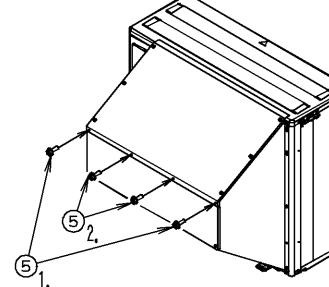

1. Temporarily secure the top plate ③ and front plate ④ to the side plate (right) ① and side plate (left) ② with the 2 screws ⑤ included in the kit.
2. Temporarily secure the top plate ③ to the front plate ④ with the 2 screws ⑤ included in the kit.
3. Tighten the 12 screws that you used to temporarily secure parts in steps 3), 4), and 5).

**2 Appearance of the snow hood (Intake rear plate) after installation**

