



## Features

- Modular design allows it to be moved around corners and through doorways with ease.
- Durable swirl gloss finish.
- Wall surround includes backer boards for future grab bar installation.
- 1/2" (13 mm) threshold with 1/2" (13mm) finished floor.
- 63-1/2" (1613 mm) x 40-5/8" (1032 mm) x 73-1/4" (1861 mm) rough-in, including flange.
- 63-1/4" (1607 mm) x 39-3/8" (1000 mm) x 72" (1829 mm) complete unit finished dimensions.

## Material

- Compression molded from our exclusive Vikrell® material.

## Installation

- Tongue-and-groove four piece modular design allows for easy snap together installation.
- Caulk required for proper installation.

## Components

Product includes:

- 62055106 39" Shower End Wall Set w/Backer Boards
- 62061100 63" Shower Base
- 62062106 63" Shower Back Wall w/Backer Boards



**ADA**

## Codes/Standards

CSA B45.5/IAPMO Z124

ASTM E162

ASTM E662

Greenguard UL 2818 - Gold

ADA

## STERLING® Warranty - Fixtures Made of Solid Vikrell Material





See website for detailed warranty information.

## Available Color/Finishes

*Color tiles intended for reference only.*

**Color   Code   Description**

	0	White
	96	KOHLER Biscuit

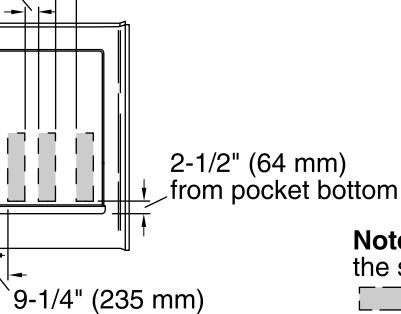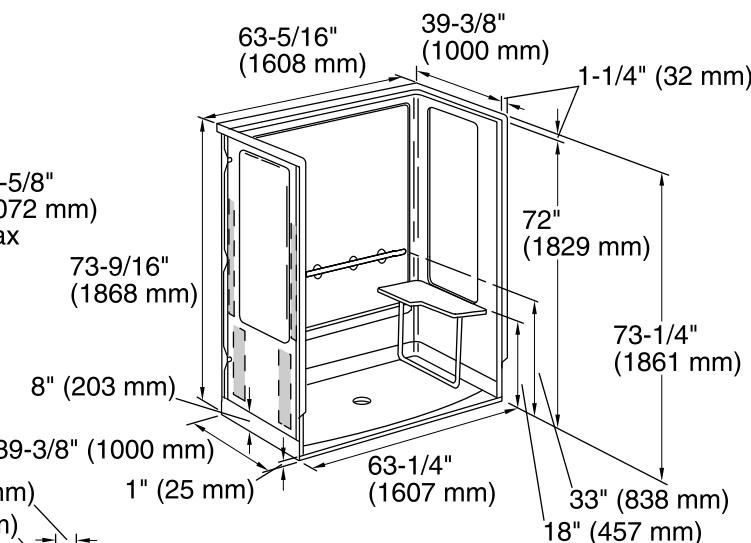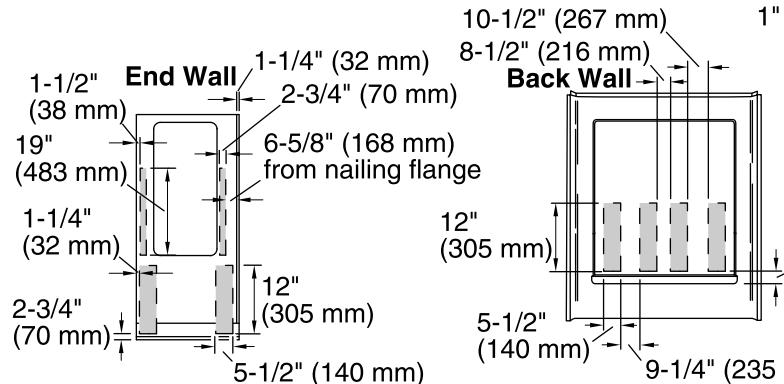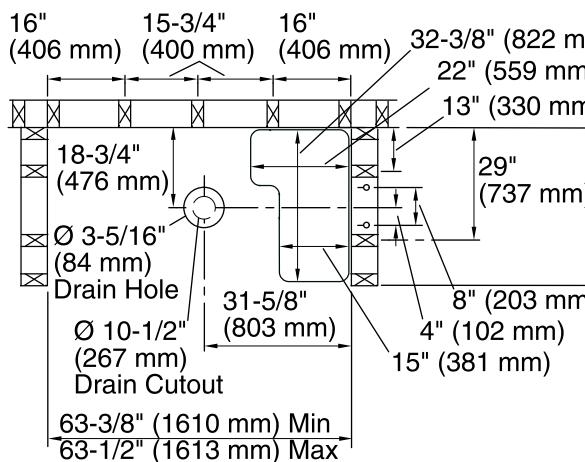

**Note:** Right and left end walls are the same, only mirrored.  
■ Backer Board Locations

## Technical Information

All product dimensions are nominal.

Installation: 3-Wall Alcove

Drain location: Center

Minimum flat for door: 2-1/2" (64 mm)

Threshold height: 1/2" (13 mm)

## Notes

Install this product according to the installation instructions.

Drain cutout in subfloor to be 10-1/2" (267 mm) per rough-in illustration as shown to allow the backside of the drain to sit below the subflow surface.

Backer boards and fasteners protrude beyond the back wall 1-1/2" (38 mm). If installing this product against wall board, 1-1/2" (38 mm) furring strips installed over the wall board are recommended. The stud pocket depth of 40-5/8" (1032 mm) will need to be increased by the combined thickness of the wall board and furring strips.

Studs should be positioned as shown.

Attach grab bars at the specified backer board locations only.

ADA compliant when installed to the specific requirements of these regulations.